


6 EASY STEPS

Privacy Walls




1 Fasten brackets onto each post

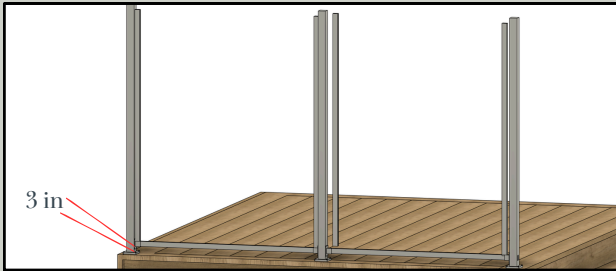


- Fasten a section of 5.5ft long bottom rail to a 6 foot post, leaving 3 inches at the bottom

3 Insert Rubber Gasket

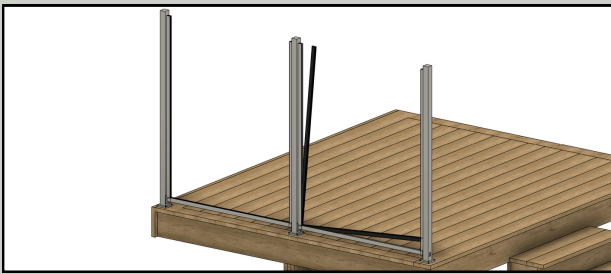


- Insert rubber gasket into channel groove and make sure it is fully seated along entire length
- Press firmly into place

5 Insert Planks In Between Posts

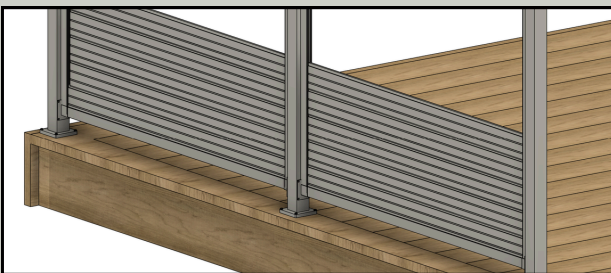


- Slide in the first board all the way to the bottom, fasten to the bottom rail with 12x3/4" screws

2 Square and level posts

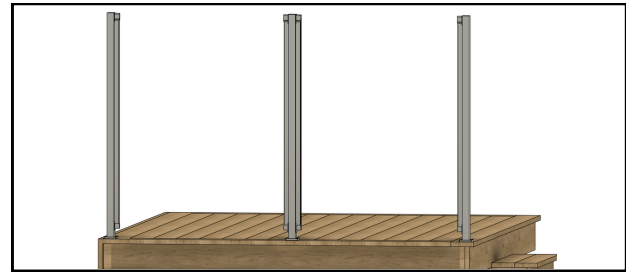


- Square and level both posts and fasten in both posts with lag screws

4 Cut aluminum privacy boards

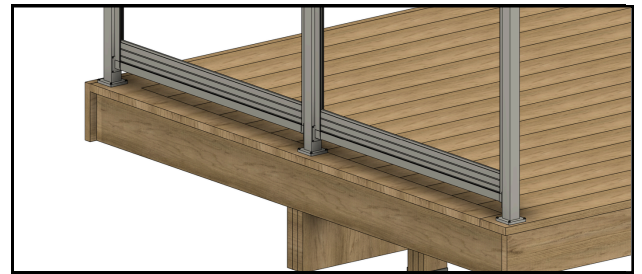

- Cut aluminum privacy boards to fit snugly between the posts
- Slide plank between vertical posts, and push firmly until fully seated and check alignment on both ends

6 Fasten Planks Onto Brackets

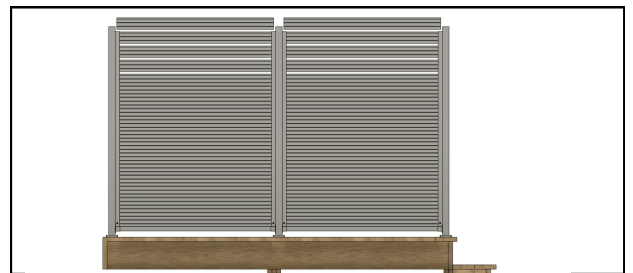

- Making sure everything in level, fasten plank against bracket